





BRAZILIAN NAVY
NAVY INDUSTRIAL DIRECTORATE
TECHNICAL DRAWING


ATTACHMENT A

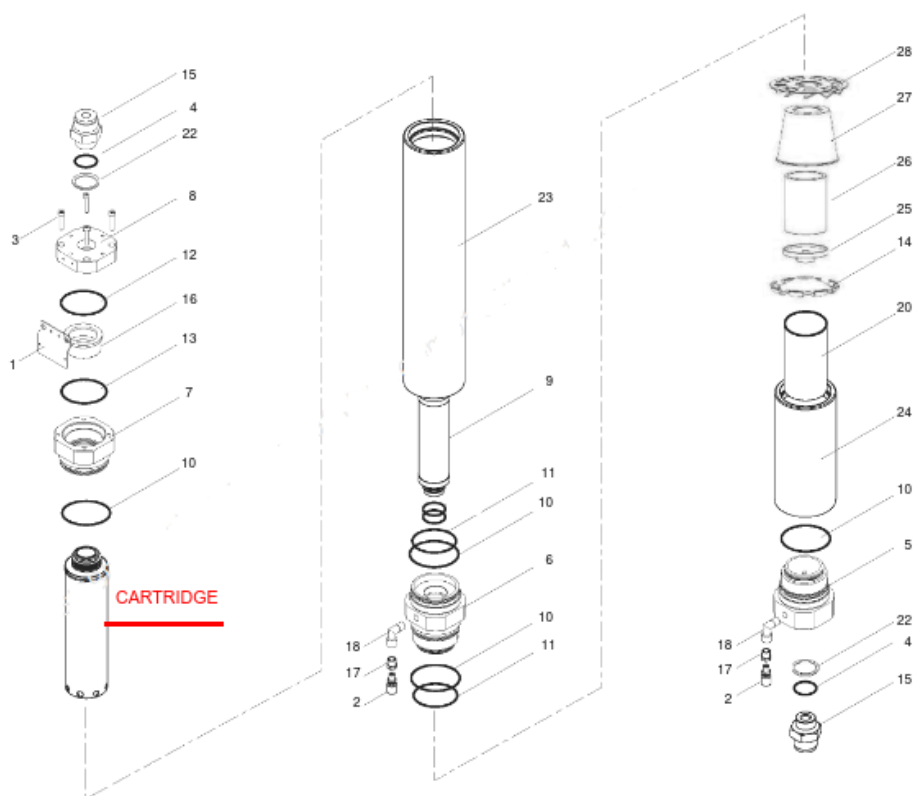


ATTACHMENT B

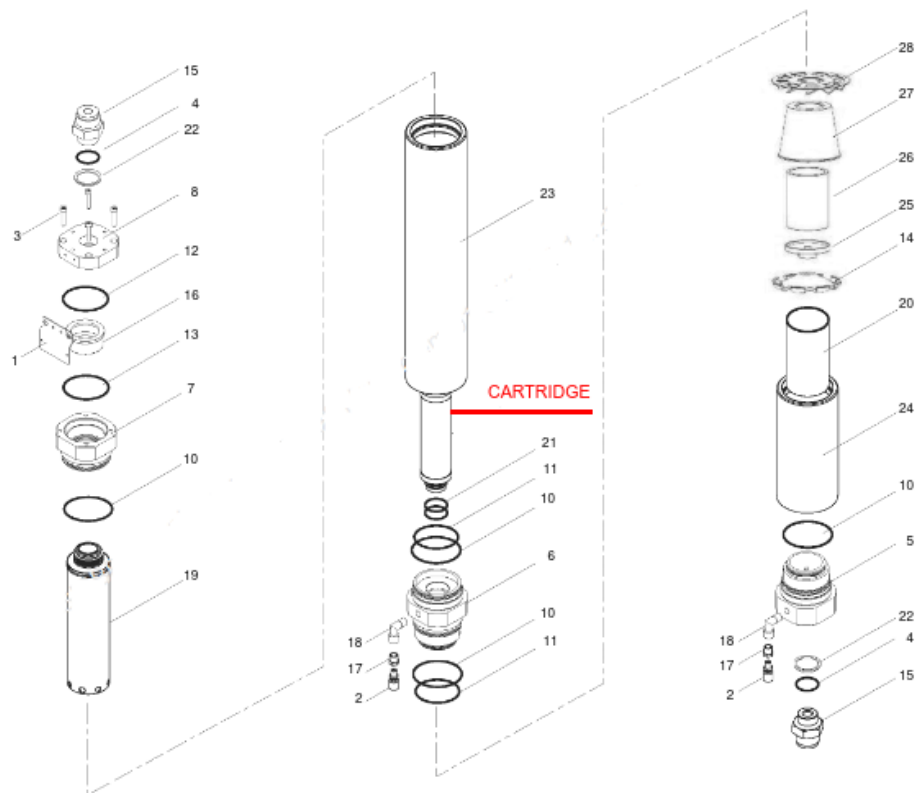


ATTACHMENT C

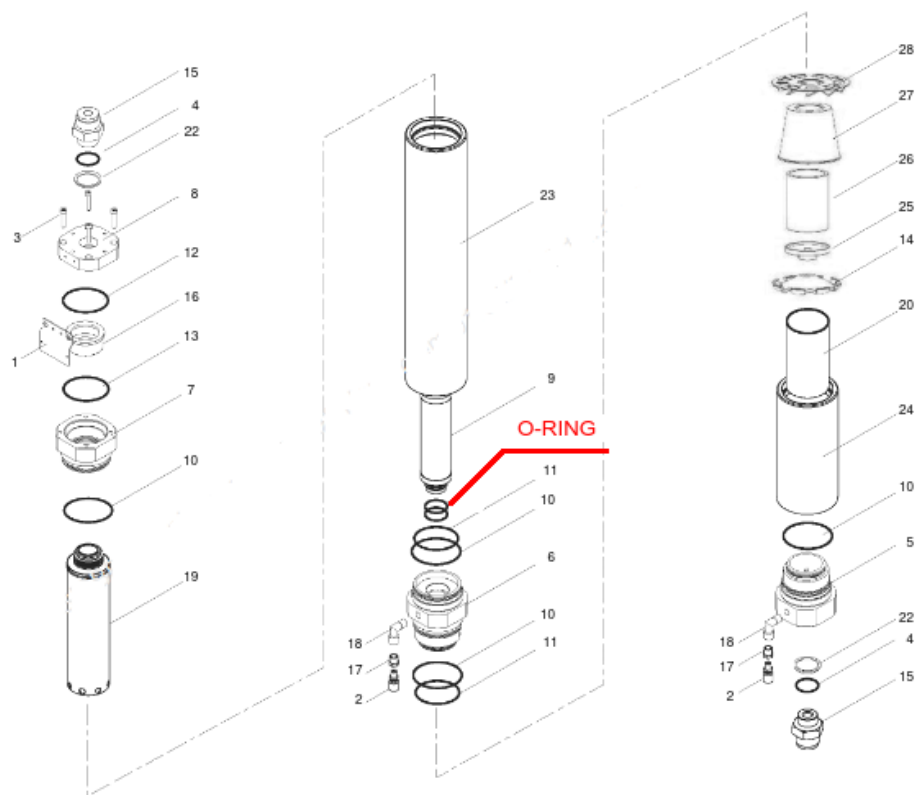


ATTACHMENT D

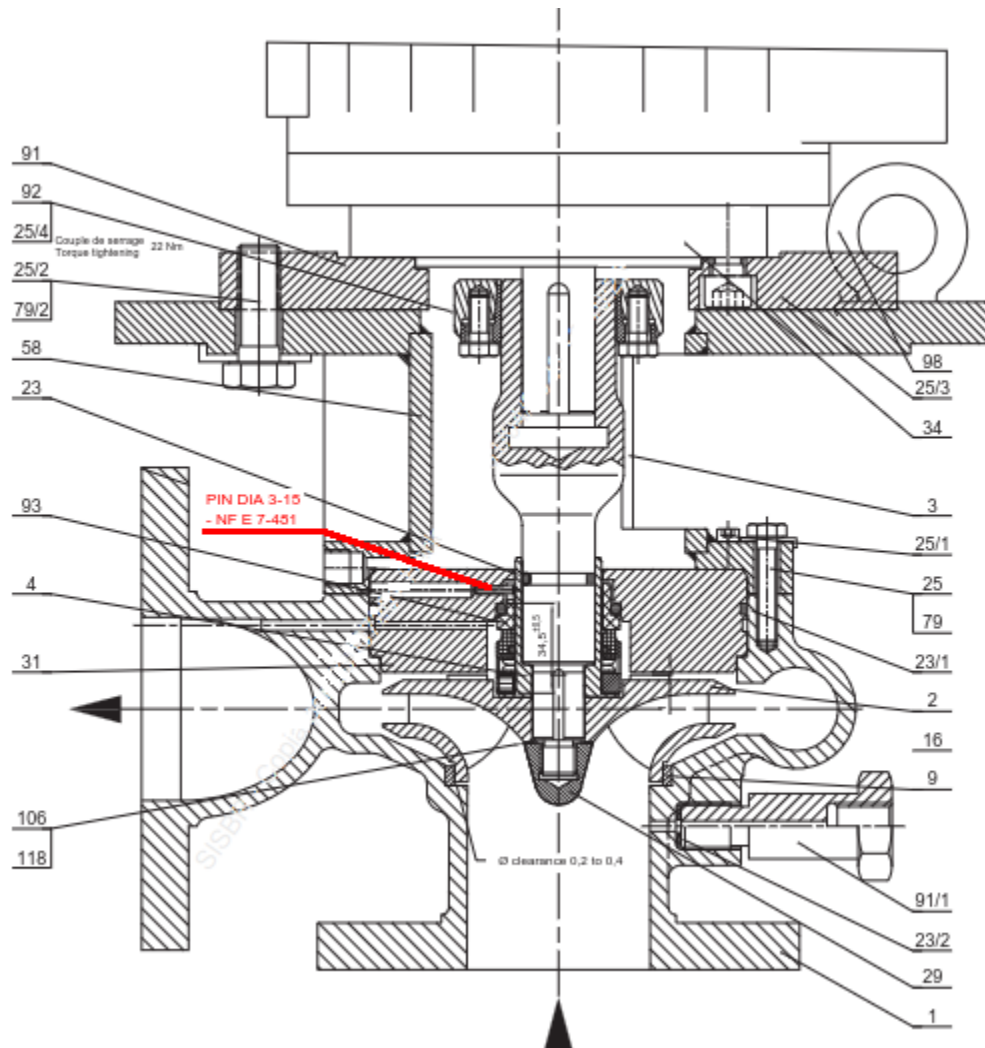


ATTACHMENT E

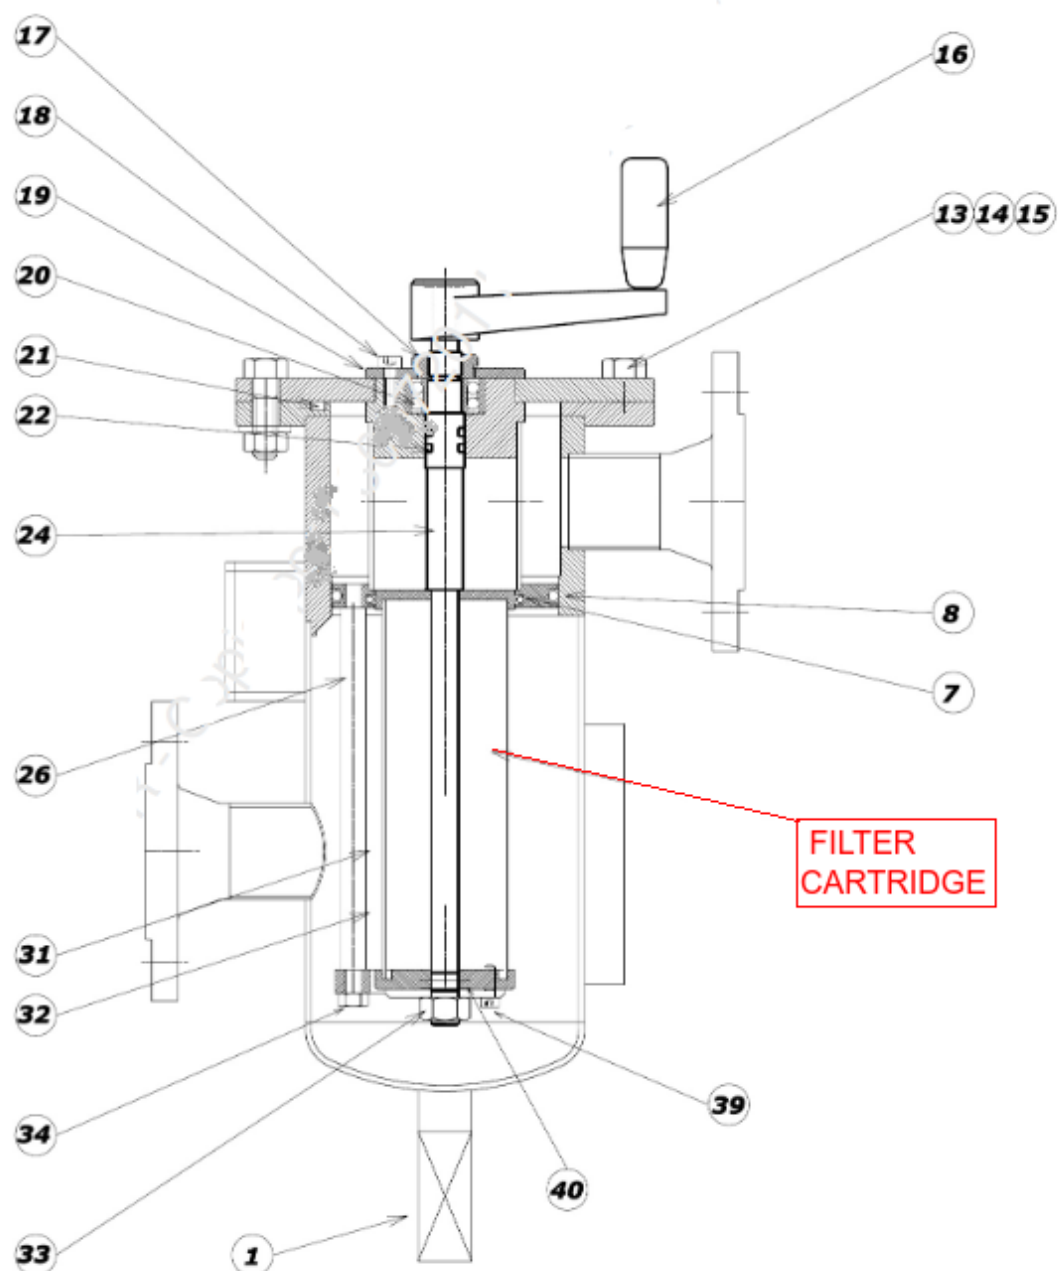


ATTACHMENT F

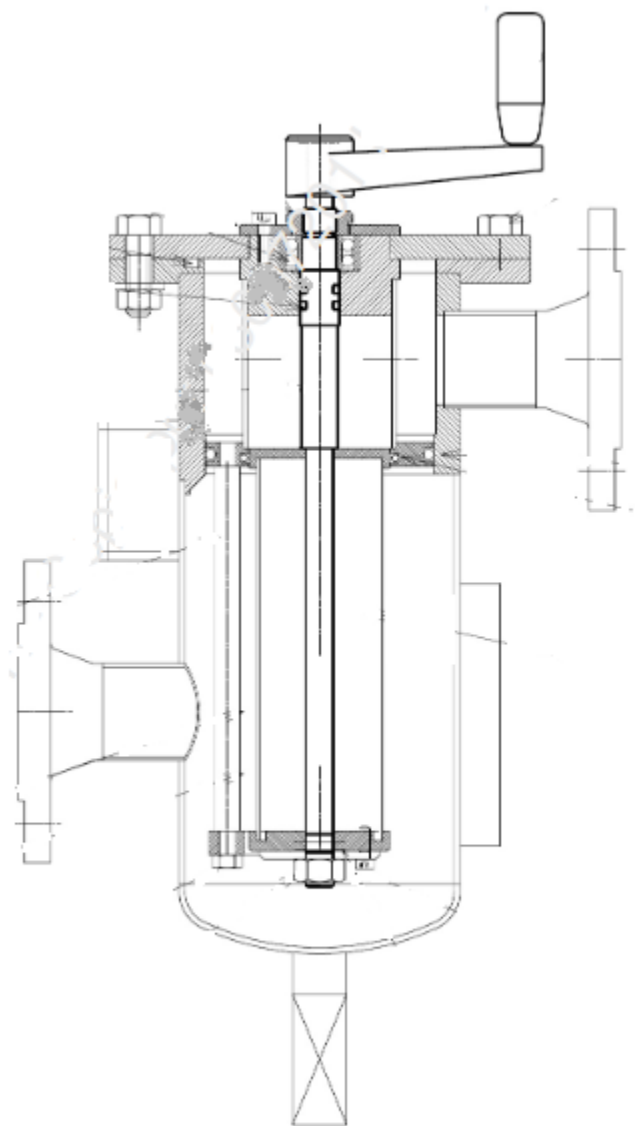


ATTACHMENT G

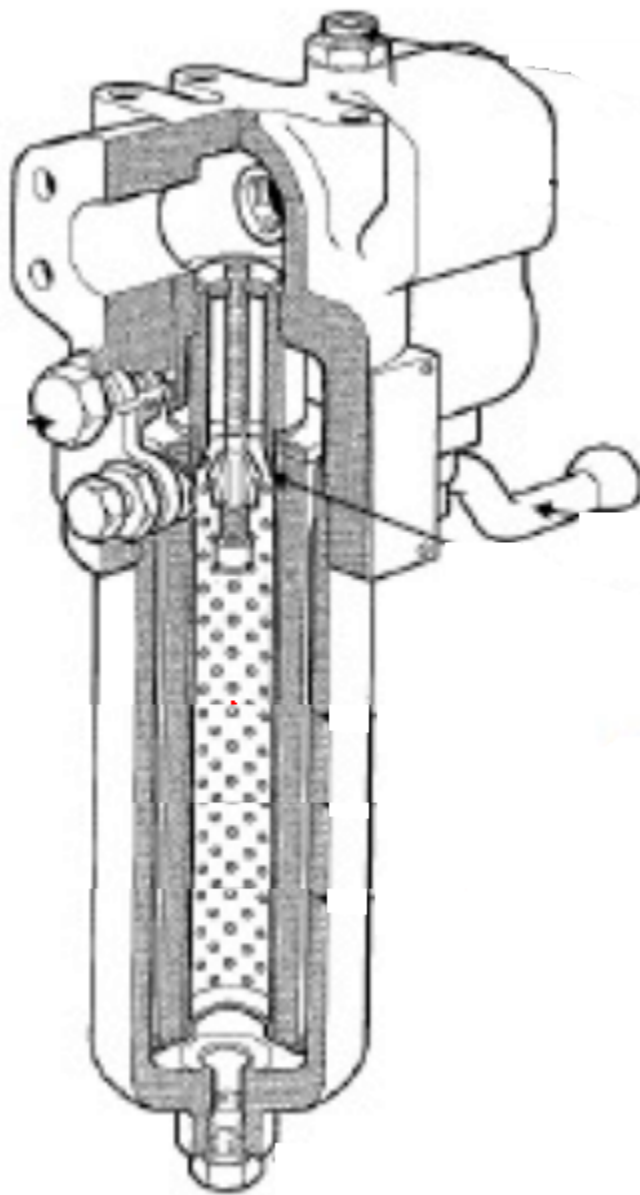


ATTACHMENT H

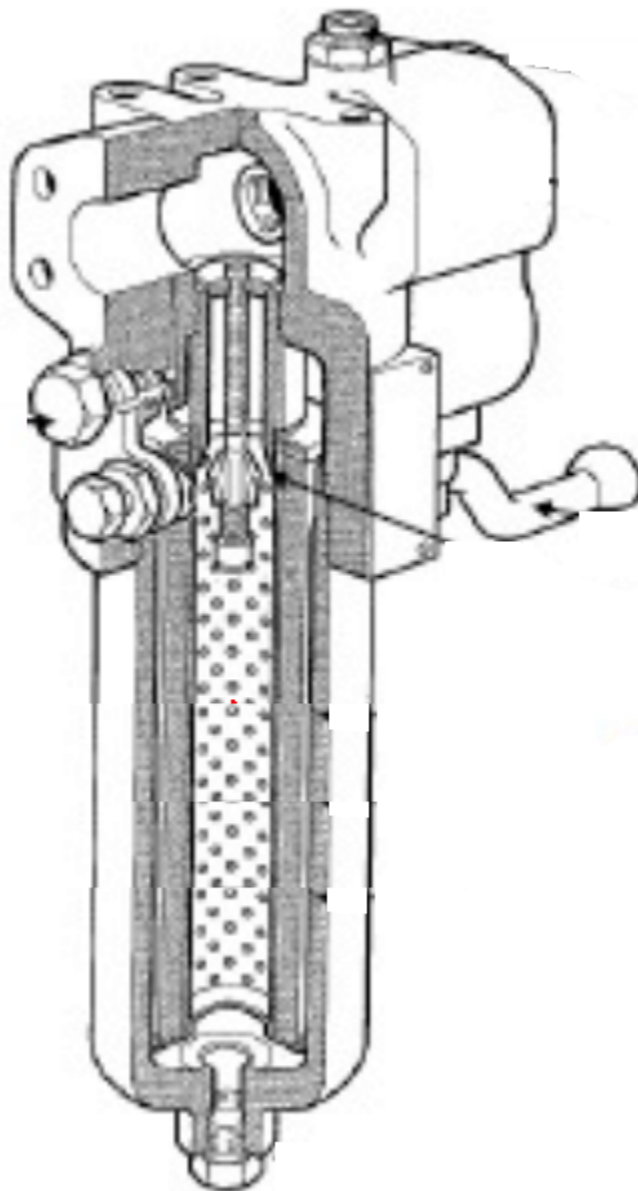


ATTACHMENT I

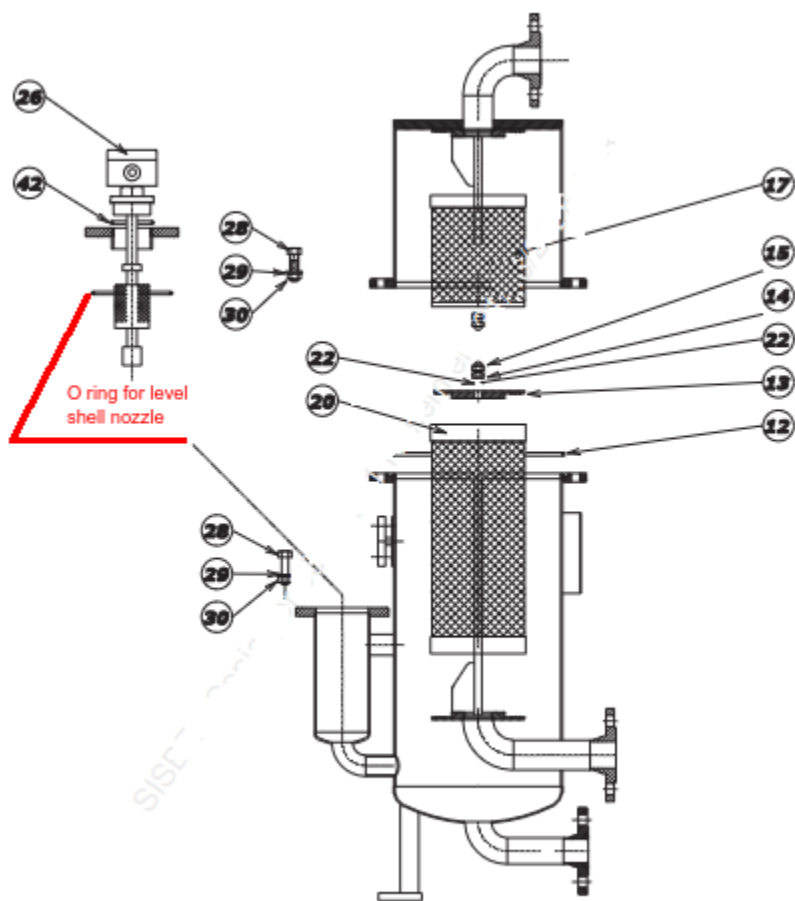


ATTACHMENT J

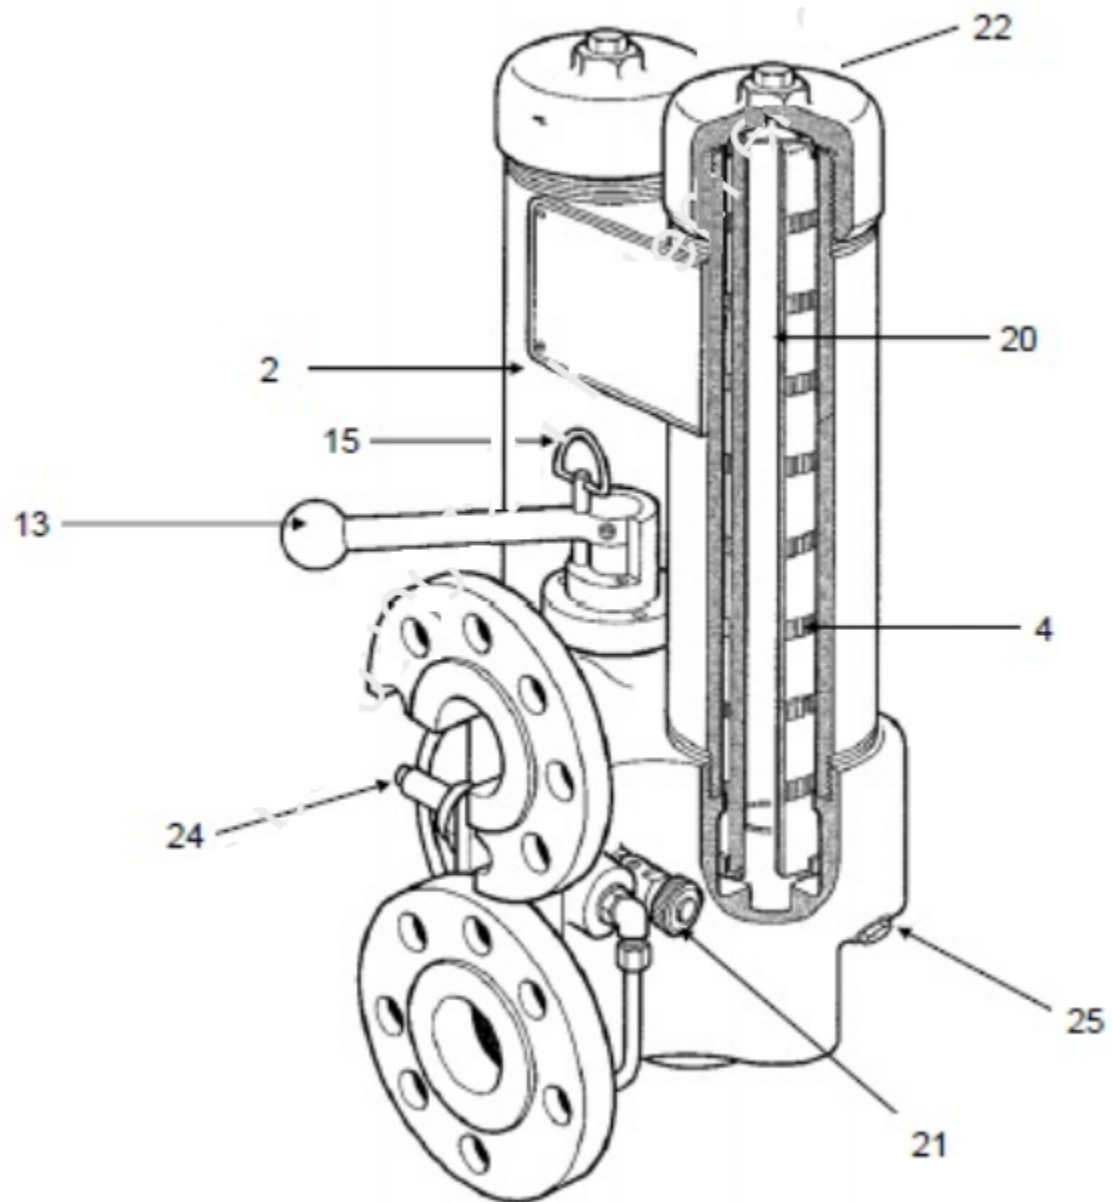


ATTACHMENT K

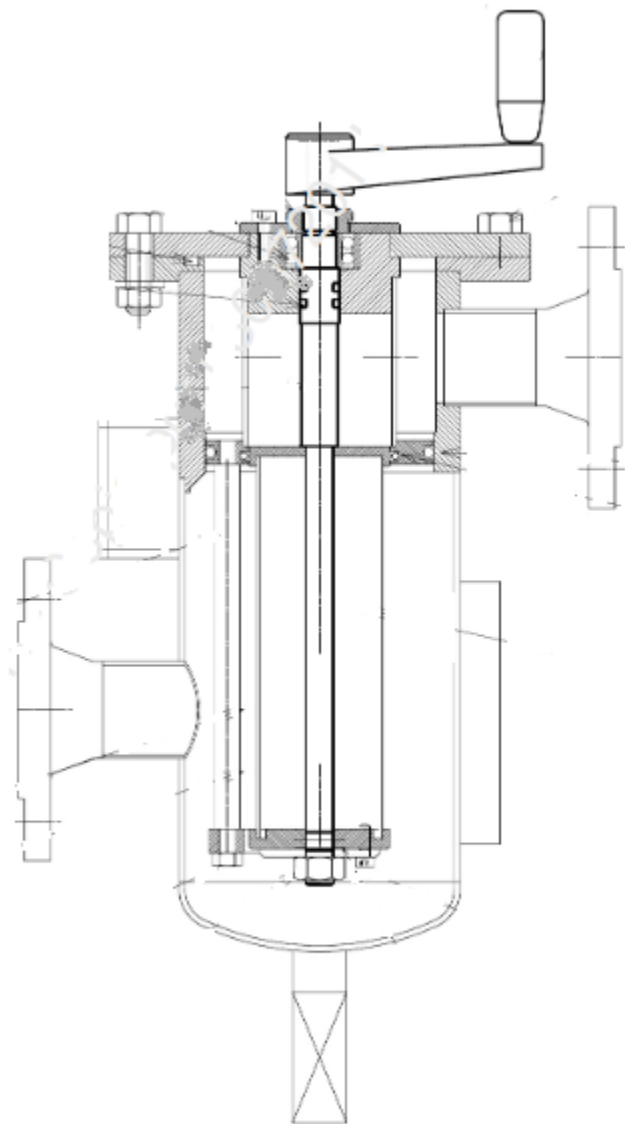


ATTACHMENT L

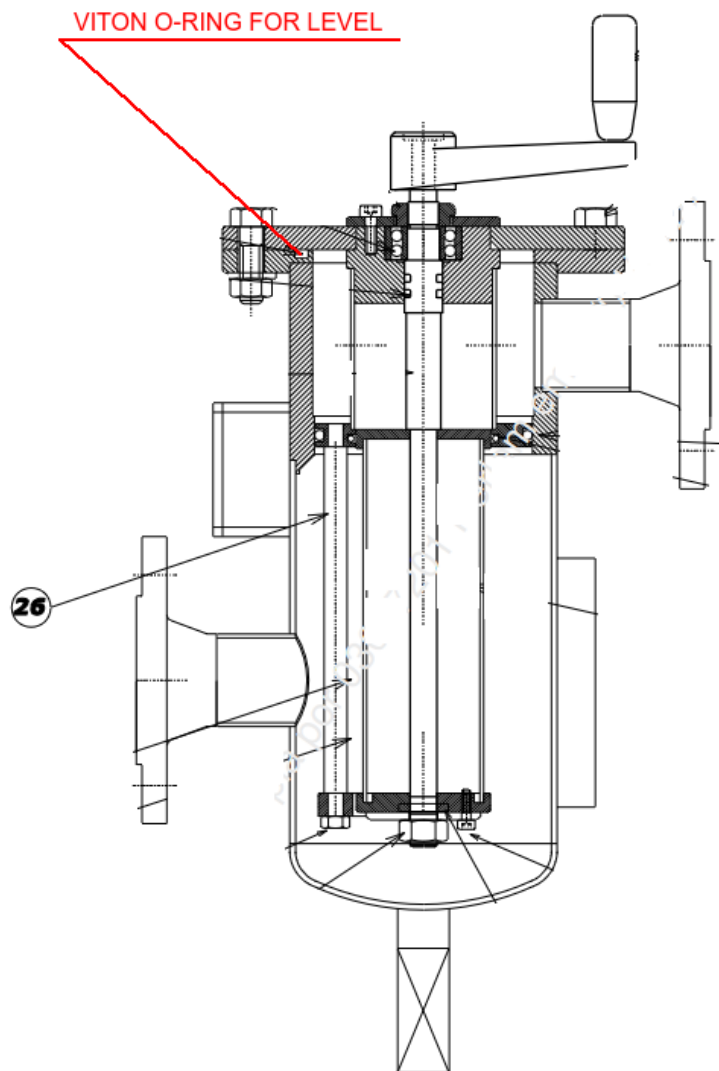

ATTACHMENT M

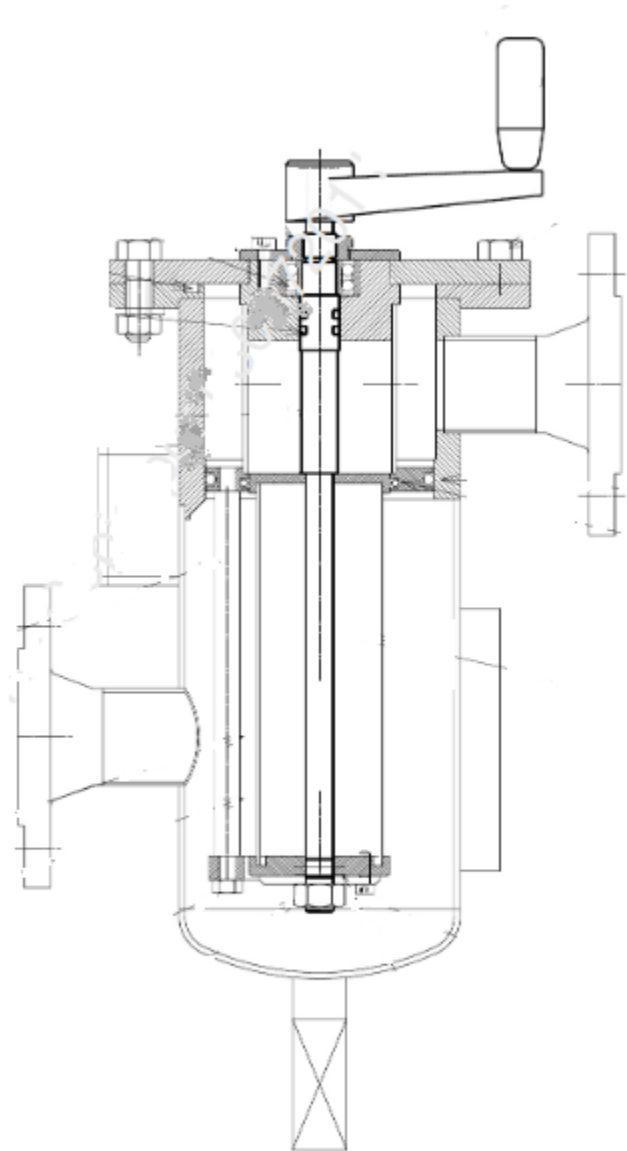

ATTACHMENT N

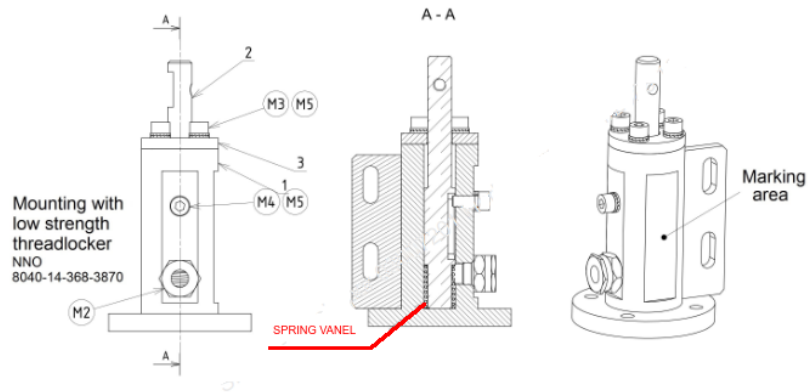


Note:
Stroke: 20mm (0/-2mm)

Filling instruction for the
grease NNO 9150-14-590-7460

1. Fill the body mark 1 with grease
2. Cover the piston mark 2 with grease
3. Fit the spring mark M1 on the piston
4. Fit this assembly into the body, toward the lower stop
5. Remove the exceed of grease
6. Assemble the cap mark 3
7. Fit the grease plug mark M2

WARNING : Filling by grease plug, only when piston in lower position.

ATTACHMENT O

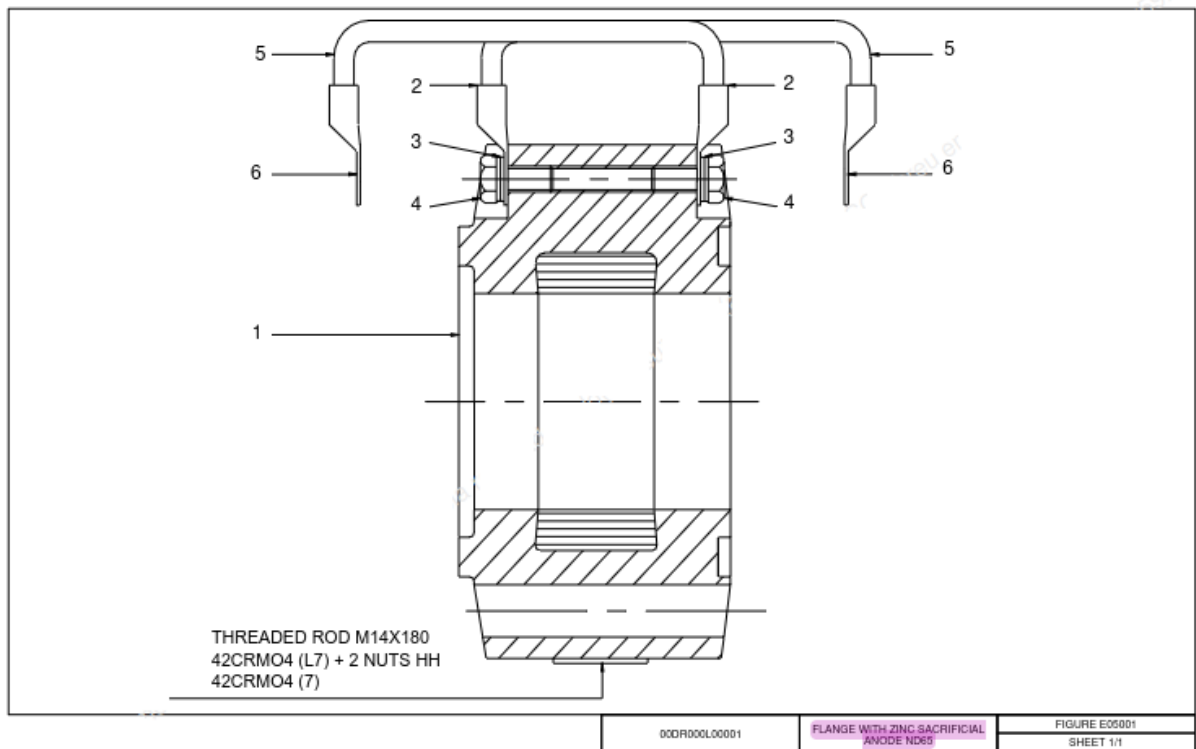

FELIPE GOMES FONTES
Lieutenant-Commander
Ship Manager

ASSINADO DIGITALMENTE